 


EZ Load Pipetting Heads

delivering solutions

Tip Loading Made Easy!

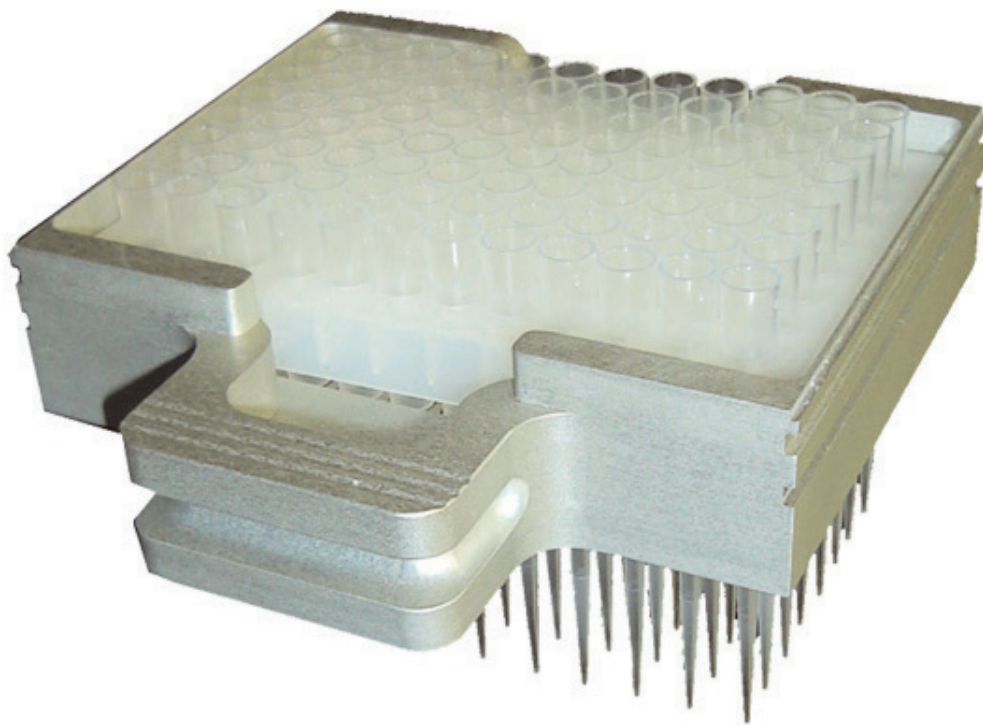

 
- ▣ The EZ-Load pipettor heads simplify the use of disposable tips for multiple channel pipetting. Tip loading and unloading becomes a simple manual process.
- ▣ Specifically-designed tip racks enable a rack of tips to be transferred directly from the package into the EZ-Load head.
- ▣ Simply drop the rack of tips into the head and place the head in the pipettor.
- ▣ A reliable seal is provided for optimal pipetting performance. The top of the pipette tips are sealed against the face seal by the pipettor's automated loading system.
- ▣ Available for all FluidX Xpp and Xps pipetting systems and also compatible with a wide range of other 96 and 384 channel pipettors.

FluidX reserve the right to update and change product information without notice.

EZ Load Pipetting Heads


4 easy steps to load disposable tips and start pipetting!

1

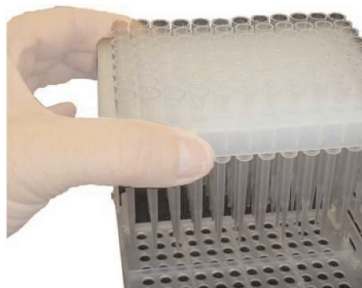


Remove tips from package rack.

 2

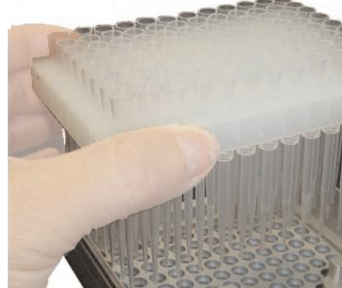


Place tips in EZ-Load head.

 3

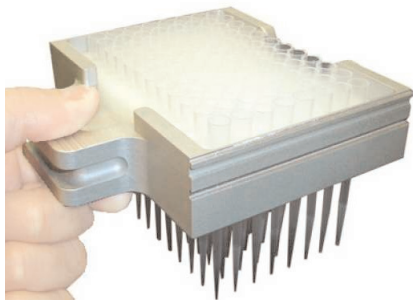

Load head into pipettor.

 4

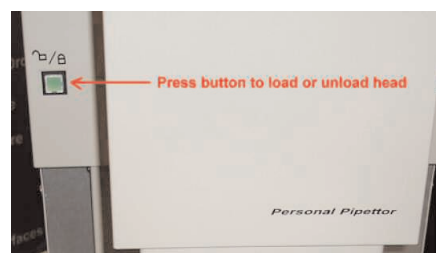

Press the Load/Unload button.

COMPATIBILITY

96-channel EZ-Load head.



Suitable for use on the Xpp-96H pipetting system using 550ul disposable tips (available from FluidX).

384-channel EZ-Load head.



Suitable for use on the Xpp-384 pipetting system using either 125ul or 50ul ESP tips (available from FluidX).

ORDERING GUIDE

Cat. No.	Description
30-9001	EZ Load pipetting head, 96-channel, for FluidX 550ul tips
30-9002	EZ Load pipetting head, 96-channel, for FluidX ESP tips
30-9003	EZ Load offset pipetting head, 96-channel, for FluidX ESP tips, for use in 384 operating in 96 channel mode
30-9004	EZ Load pipetting head, 384-channel, for 384 FluidX ESP tips
30-9101	Insert for EZ-Load head, 8-channel, for FluidX 550ul tips, for "column" serial dilution, for 96 channel systems
30-9102	Insert for EZ-Load head, 12-channel, for FluidX 550ul tips, for "row" serial dilution, for 96 channel systems
30-9103	Insert for EZ-Load head, 8-channel, for FluidX ESP tips, for "column" serial dilution, for 96 channel systems
30-9104	Insert for EZ-Load head, 12-channel, for FluidX ESP tips, for "row" serial dilution, for 96 channel systems
30-9105	Insert for EZ-Load head, 16-channel, for FluidX ESP tips, for "column" serial dilution, for 384 channel systems
30-9106	Insert for EZ-Load head, 24-channel, for FluidX ESP tips, for "row" serial dilution, for 384 channel systems
30-9107	Insert for EZ-Load offset head, 8-channel, for FluidX ESP tips, for "column" serial dilution, for 384 channel systems operating in 96-channel mode
30-9108	Insert for EZ-Load offset head, 12-channel, for FluidX ESP tips, for "row" serial dilution for 384 channel systems operating in 96-channel mode